

DCH DVR 6400 and DCH 6200 Installation Setup Using an HDMI Cable

REMEMBER: With this setup, your TV must be set to whichever HDMI INPUT slot you connected the HDMI cable into. You can change this on your TV remote or main menu. Examples of the input channel are: HDMI (1, 2, or 3 depending on TV). Once you have the TV on the correct video setting, you can change the cable station on the digital box using our provided remote.

